

Date : 2025-08-19

CERTIFICATE OF ANALYSIS - GC PROFILING

SAMPLE IDENTIFICATION

Internal code : 25H06-PTH06

Customer Identification : Organic Sweet Orange - Mexico - O30117R

Type : Essential Oil

Source : *Citrus sinensis*

Customer : Plant Therapy

Checked and approved by:

Sylvain Mercier, M. Sc., Chimiste 2014-005

Notes: This report may not be published, including online, without the written consent from Laboratoire PhytoChemia. This report is digitally signed, it is only considered valid if the digital signature is intact. The results only describe the samples that were submitted to the assays.

GAS CHROMATOGRAPHIC ANALYSIS

Method : PC-MAT-014 - Analysis of the composition of an essential oil or other volatile liquide by FAST GC-FID

✖ISO

Results : See analysis summary (next page)

Analyst : Jean-Christophe Fortin, M. Sc.

Date : 2025-08-13

PHYSICOCHEMICAL DATA

Refractive index : 1.4733 ± 0.0003 (20 °C)

Method : PC-MAT-016 - Measure of the refractive index of a liquid.

Analyst : Cindy Caron B. Sc.

Date : 2025-08-06

CONCLUSION

No adulterant, contaminant or diluent has been detected using this method.

ANALYSIS SUMMARY - CONSOLIDATED CONTENTS

New readers of similar reports are encouraged to read table footnotes at least once.

Identification	%	Class
α -Thujene	0.01	Monoterpene
α -Pinene	0.57	Monoterpene
Camphene	tr	Monoterpene
β -Pinene	0.02	Monoterpene
Sabinene	0.25	Monoterpene
Myrcene	1.98	Monoterpene
Octanal	0.25	Aliphatic aldehyde
α -Phellandrene	0.04	Monoterpene
Δ^3 -Carene	0.14	Monoterpene
Limonene	93.87	Monoterpene
β -Phellandrene	0.28	Monoterpene
(Z)- β -Ocimene	0.01	Monoterpene
(E)- β -Ocimene	0.02	Monoterpene
γ -Terpinene	0.01	Monoterpene
cis-Sabinene hydrate	0.01	Monoterpenic alcohol
Octanol	0.02	Aliphatic alcohol
Terpinolene	0.03	Monoterpene
Linalool	0.32	Monoterpenic alcohol
Nonanal	0.04	Aliphatic aldehyde
trans-para-Mentha-2,8-dien-1-ol	0.01	Monoterpenic alcohol
trans-Limonene oxide	0.01	Monoterpenic ether
Citronellal	0.05	Monoterpenic aldehyde
Terpinen-4-ol	tr	Monoterpenic alcohol
α -Terpineol	0.04	Monoterpenic alcohol
Decanal	0.18	Aliphatic aldehyde
Octyl acetate	0.01	Aliphatic ester
para-Cymene	0.01	Monoterpene
Nerol	0.01	Monoterpenic alcohol
Citronellol	0.01	Monoterpenic alcohol
Neral	0.06	Monoterpenic aldehyde
Geranial	0.08	Monoterpenic aldehyde
Limonen-10-ol	0.02	Monoterpenic alcohol
Undecanal	0.01	Aliphatic aldehyde
α -Copaene	0.03	Sesquiterpene
Geranyl acetate	0.02	Monoterpenic ester
β -Elemene	0.01	Sesquiterpene
Dodecanal	0.04	Aliphatic aldehyde
β -Caryophyllene	0.02	Sesquiterpene
β -Copaene	0.02	Sesquiterpene
α -Humulene	0.01	Sesquiterpene

(E)- β -Farnesene	0.01	Sesquiterpene
Germacrene D	0.02	Sesquiterpene
Valencene	0.02	Sesquiterpene
(3E,6E)- α -Farnesene	0.02	Sesquiterpene
γ -Cadinene	0.01	Sesquiterpene
δ -Cadinene	0.03	Sesquiterpene
α -Elemol	0.01	Sesquiterpenic alcohol
Caryophyllene oxide	0.01	Sesquiterpenic ether
β -Sinensal	0.02	Sesquiterpenic aldehyde
α -Sinensal	0.03	Sesquiterpenic aldehyde
Myristic acid	0.01	Aliphatic acid
Hexadecanal	0.02	Aliphatic aldehyde
Palmitic acid	0.04	Aliphatic acid
Linoleic acid	0.02	Aliphatic acid
Oleic acid	0.01	Aliphatic acid
Stearic acid	0.13	Aliphatic acid
Tangeretin isomer	0.02	Flavonoid
Tangeretin	0.04	Flavonoid
3,3',4',5,6,7,8-Heptamethoxyflavone	0.07	Flavonoid
Nobiletin	0.03	Flavonoid
Consolidated total	99.12	

tr: The compound has been detected below 0.005% of the total signal


Note: no correction factor was applied


About "consolidated" data: The table above presents the breakdown of the sample volatile constituents after applying an algorithm to collapse data acquired from the multi-columns system of PhytoChemia into a single set of consolidated contents. In case of discrepancies between columns, the algorithm is set to prioritize data from the most standard DB-5 column, and smallest values so as to avoid overestimating individual content. This process is semi-automatic. Advanced users are invited to consult the "Full analysis data" table after the chromatograms in this report to access the full untreated data and perform their own calculations if needed.

Unknowns: Unknown compounds' mass spectral data is presented in the "Full analysis data" table. The occurrence of unknown compounds is to be expected in many samples, and does not denote particular problems unless noted otherwise in the conclusion.

Bracketed value ([xx]): A bracketed percent value indicate that two or more compound percentage could not be solved due to coelution.

This page was intentionally left blank. The following pages present the complete data of the analysis.

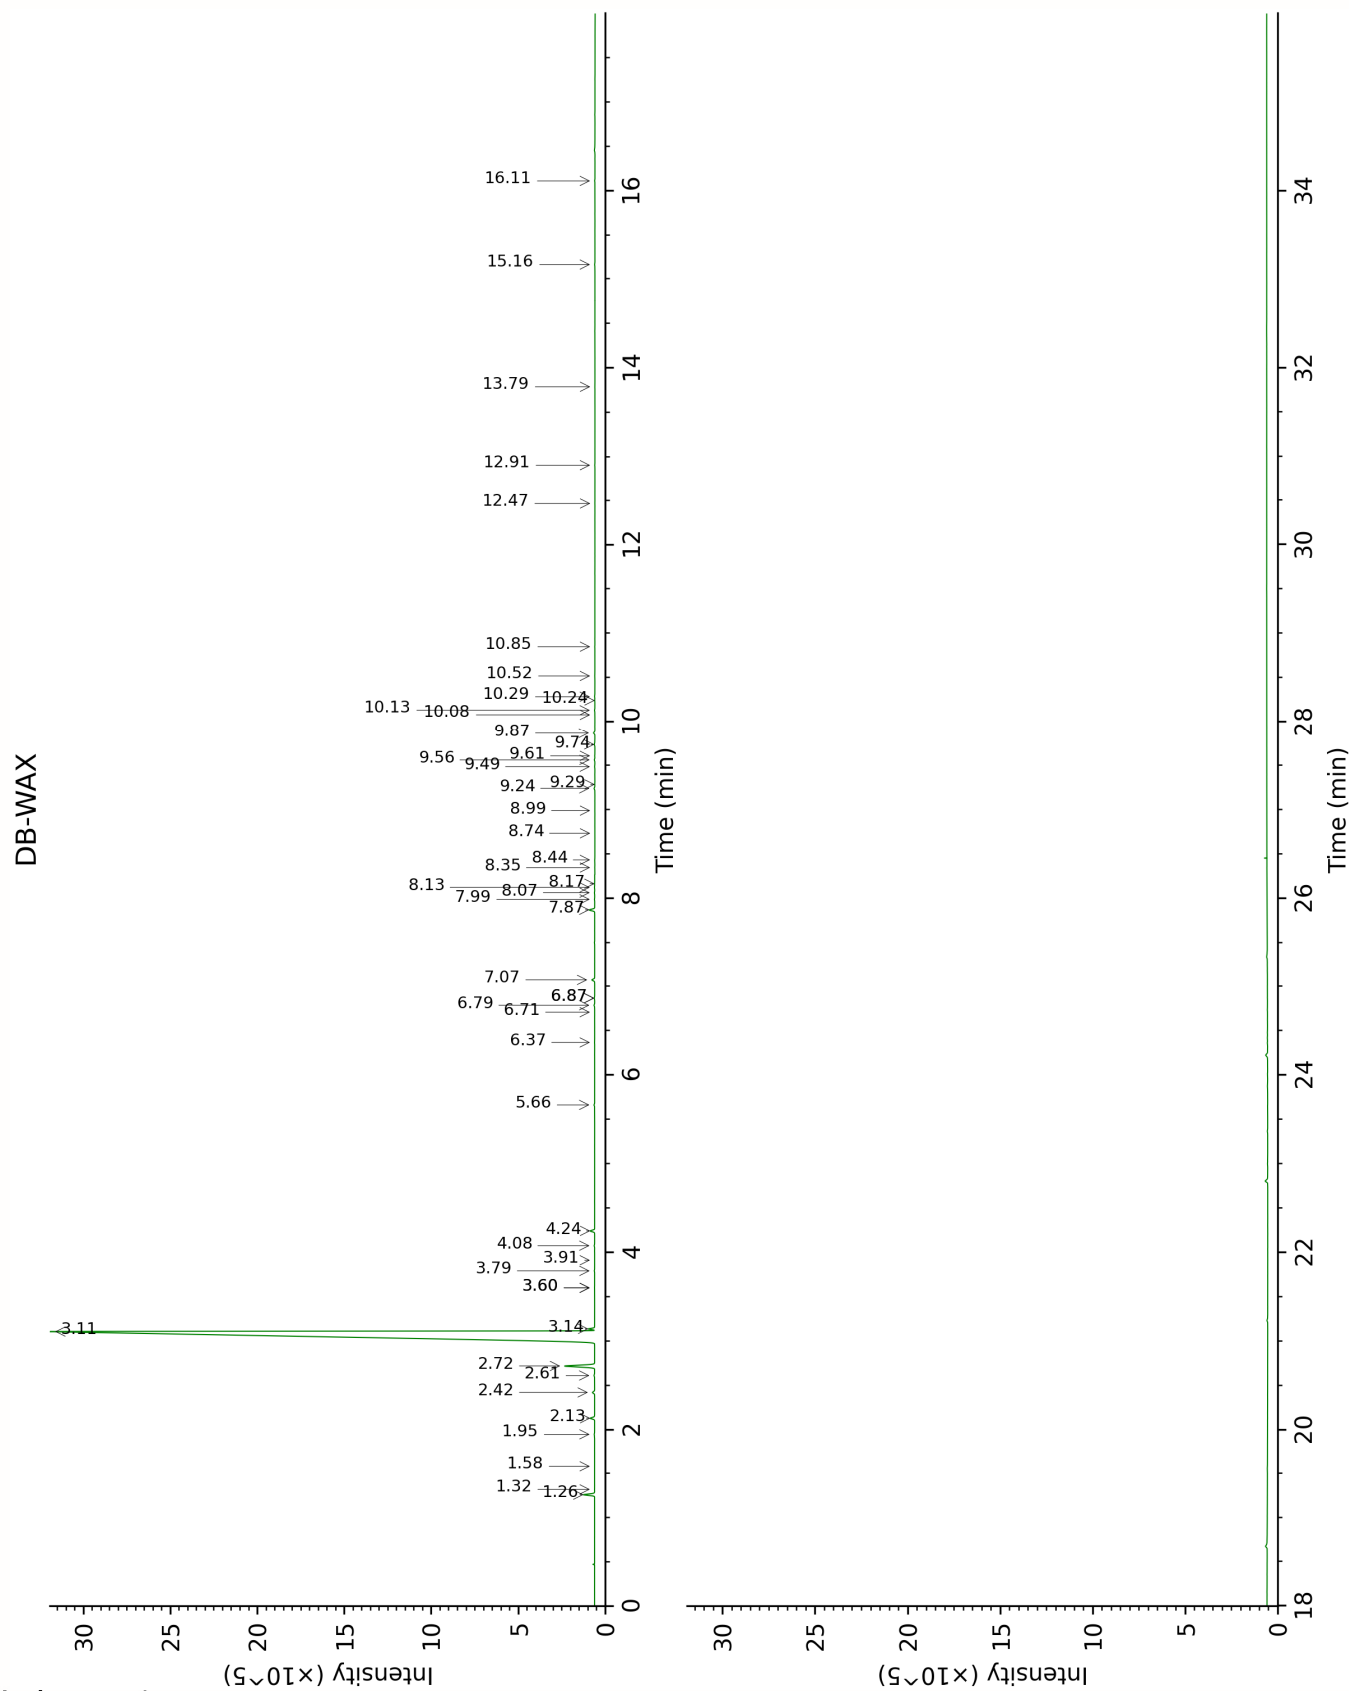

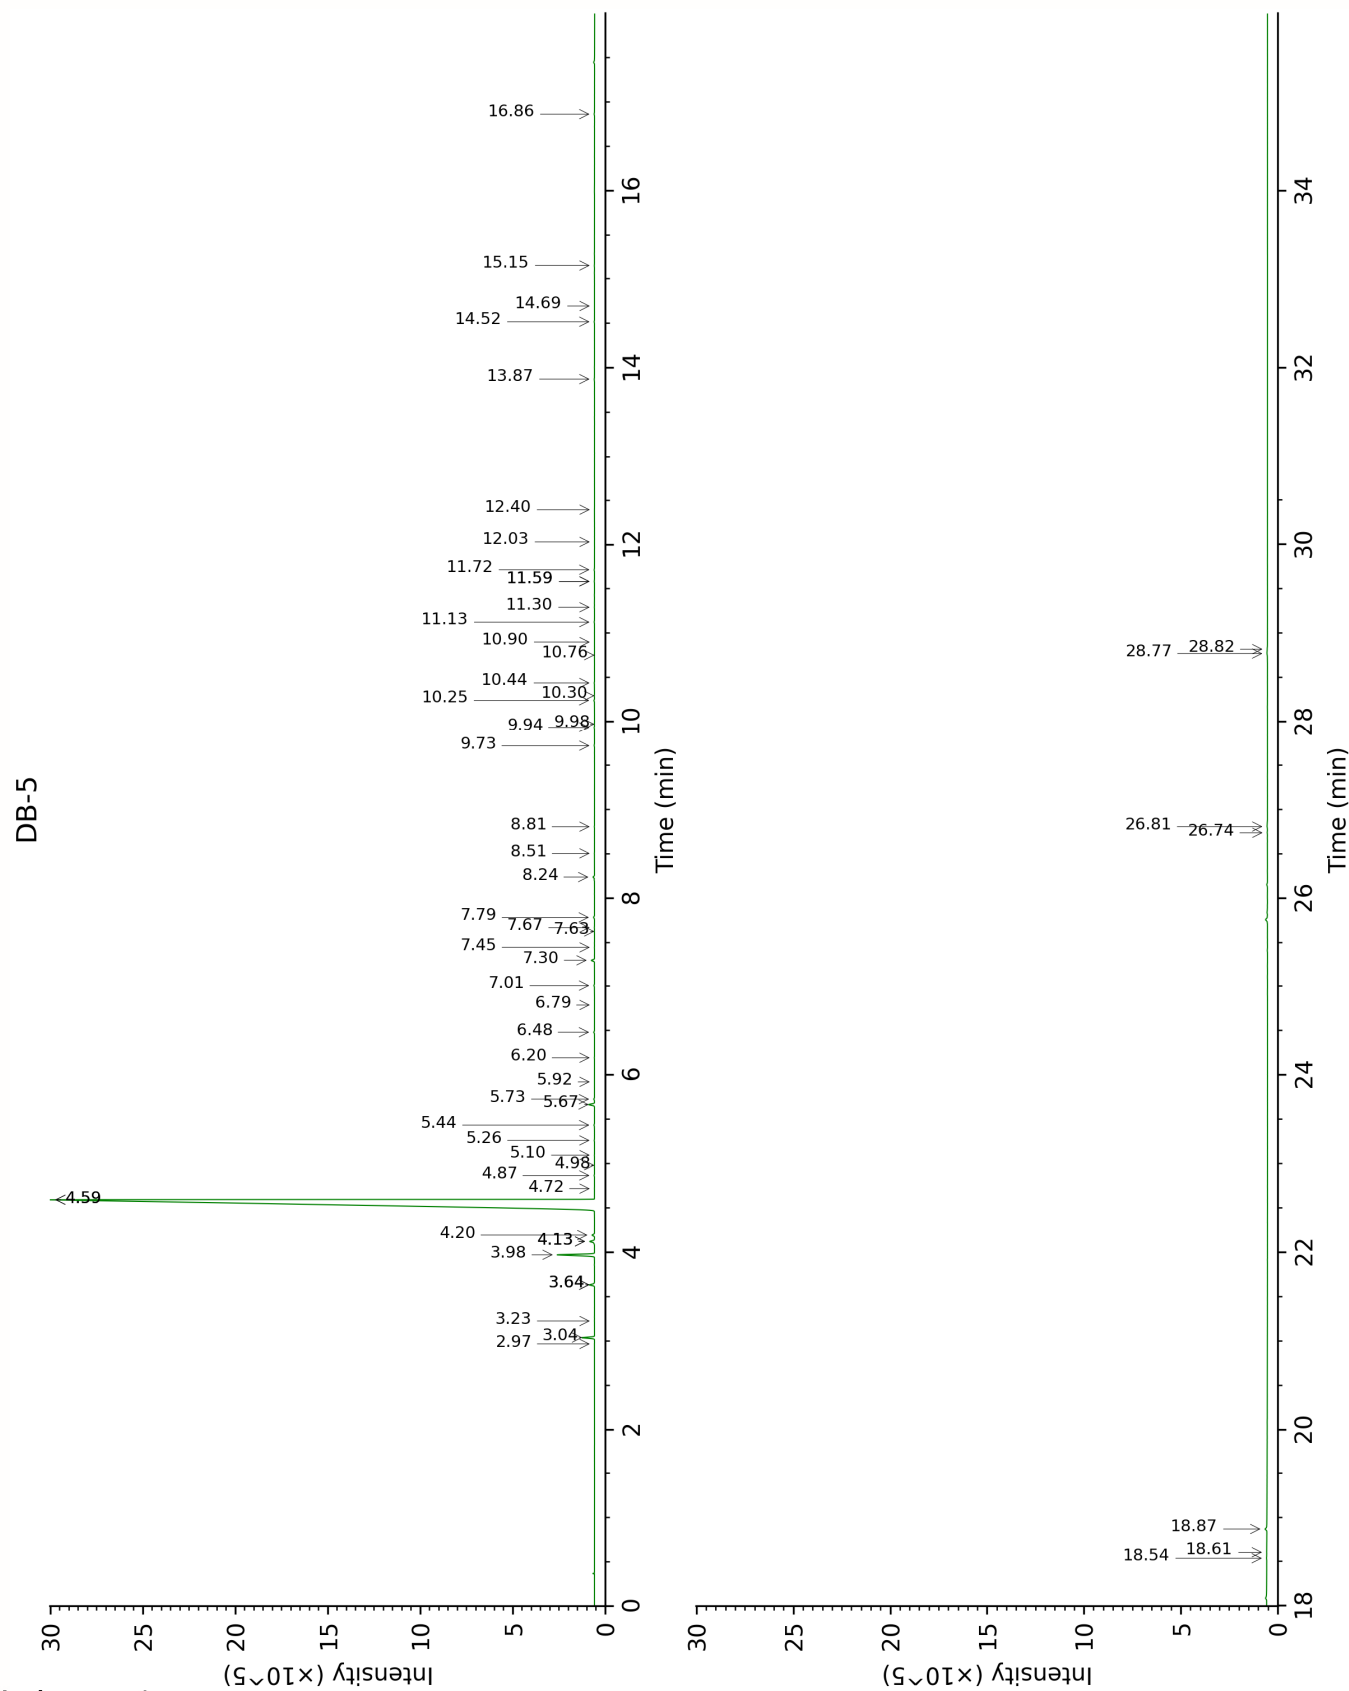

FULL ANALYSIS DATA

α-Thujene	Column DB-WAX			Column DB-5		
	1.32	999.7	tr	2.97	926.3	0.01
α -Pinene	1.26	990.7	0.58	3.04	931.1	0.57
Camphene	1.58	1026.7	tr	3.23	943.6	tr
β -Pinene	1.95	1065.3	0.02	3.64*	971.0	[0.27]
Sabinene	2.13	1084.3	0.25	3.64*	971.0	[0.27]
Myrcene	2.72	1134.8	1.98	3.98	993.7	1.98
Octanal	4.24	1253.3	0.25	4.13*	1003.8	[0.30]
α -Phellandrene	2.61	1126.2	0.04	4.13*	1003.8	[0.30]
Δ^3 -Carene	2.42	1110.8	0.14	4.20	1008.4	0.14
Limonene	3.11	1166.2	93.87	4.60*	1033.6	[93.97]
β -Phellandrene	3.14	1168.7	0.28	4.60*	1033.6	[93.97]
(Z)- β -Ocimene	3.60*	1205.5	[0.01]	4.72	1041.5	0.01
(E)- β -Ocimene	3.79	1219.7	0.02	4.87	1051.0	0.02
γ -Terpinene	3.60*	1205.5	[0.01]	4.98	1058.3	0.01
cis-Sabinene hydrate	6.71	1433.0	0.01	5.10	1065.5	0.01
Octanol	7.99	1529.6	0.02	5.26	1076.0	0.02
Terpinolene	4.08	1240.9	0.03	5.44	1087.0	0.03
Linalool	7.87	1520.4	0.32	5.67	1101.8	0.32
Nonanal	5.66	1356.9	0.04	5.73	1105.6	0.04
trans-para-Mentha-2,8-dien-1-ol	8.74	1587.3	tr	5.92	1118.3	0.01
trans-Limonene oxide	6.37	1407.8	0.01	6.20	1135.9	0.01
Citronellal	6.79	1438.9	0.04	6.48	1154.6	0.05
Terpinen-4-ol	8.35	1557.4	0.01	6.79	1174.6	tr
α -Terpineol	9.56	1654.0	0.04	7.01	1188.8	0.04
Decanal	7.07	1460.1	0.17	7.30	1208.1	0.18
Octyl acetate	6.87*	1444.8	[0.03]	7.45	1218.0	0.01
para-Cymene	3.91	1228.7	0.01			
Nerol	10.85	1761.3	0.01	7.63	1230.3	0.01
Citronellol	10.52	1733.3	0.02	7.67	1233.3	0.01
Neral	9.24	1627.9	0.06	7.79	1241.1	0.06
Geranial	9.87	1678.7	0.09	8.24	1272.1	0.08
Limonen-10-ol	12.91	1944.5	0.01	8.51	1290.4	0.02
Undecanal	8.44	1564.1	0.01	8.81	1307.7	0.01
α -Copaene	6.87*	1444.8	[0.03]	9.73	1372.8	0.03
Geranyl acetate	10.29	1713.4	0.03	9.94	1388.0	0.02
β -Elemene	8.17	1543.2	0.01	9.98	1390.6	0.01
Dodecanal	9.74	1668.1	0.05	10.25	1410.0	0.04
β -Caryophyllene	8.13	1540.0	0.02	10.30	1413.9	0.02
β -Copaene	8.07	1535.4	0.02	10.44	1424.8	0.02
α -Humulene	8.99	1607.6	0.01	10.76	1448.3	0.01
(E)- β -Farnesene	9.29	1631.5	0.01	10.90	1459.3	0.01
Germacrene D	9.49	1647.7	0.03	11.13	1476.2	0.02

Valencene	9.61	1657.7	0.02	11.30	1488.7	0.02
(3E,6E)- α -Farnesene	10.24	1709.8	0.02	11.59*	1510.9	[0.03]
γ -Cadinene	10.08	1695.9	0.01	11.59*	1510.9	[0.03]
δ -Cadinene	10.13	1700.4	0.03	11.72	1521.3	0.03
α -Elemol	13.79	2027.5	0.01	12.03	1546.0	0.01
Caryophyllene oxide	12.47	1903.6	tr	12.40	1574.8	0.01
β -Sinensal	15.16	2163.0	0.03	13.87	1695.9	0.02
α -Sinensal	16.11	2261.4	0.02	14.52	1751.5	0.03
Myristic acid				14.69	1766.9	0.01
Hexadecanal				15.15	1806.4	0.02
Palmitic acid				16.86	1965.7	0.04
Linoleic acid				18.54	2131.5	0.02
Oleic acid				18.61	2138.5	0.01
Stearic acid				18.87	2165.7	0.13
Tangeretin isomer				26.74	3123.2	0.02
Tangeretin				26.81	3130.8	0.04
3,3',4',5,6,7,8-Heptamethoxyflavone				28.77	3313.5	0.07
Nobiletin				28.82	3317.0	0.03
Total reported		98.68%			98.94%	

*: Two or more compounds are coeluting on this column

[xx]: Duplicate percentage due to coelutions, only the first one is taken into account in the consolidated total

†: Peaks apexes were resolved, but peaks overlapped and were summed for analysis

tr: The compound has been detected below 0.005% of total signal.

Note: no correction factor was applied
R.T.: Retention time (minutes)
R.I.: Retention index